


**STAR WARS**  
RETURN OF THE  
**JEDI**

**RADAR  
LASER  
CANNON™  
TOY**

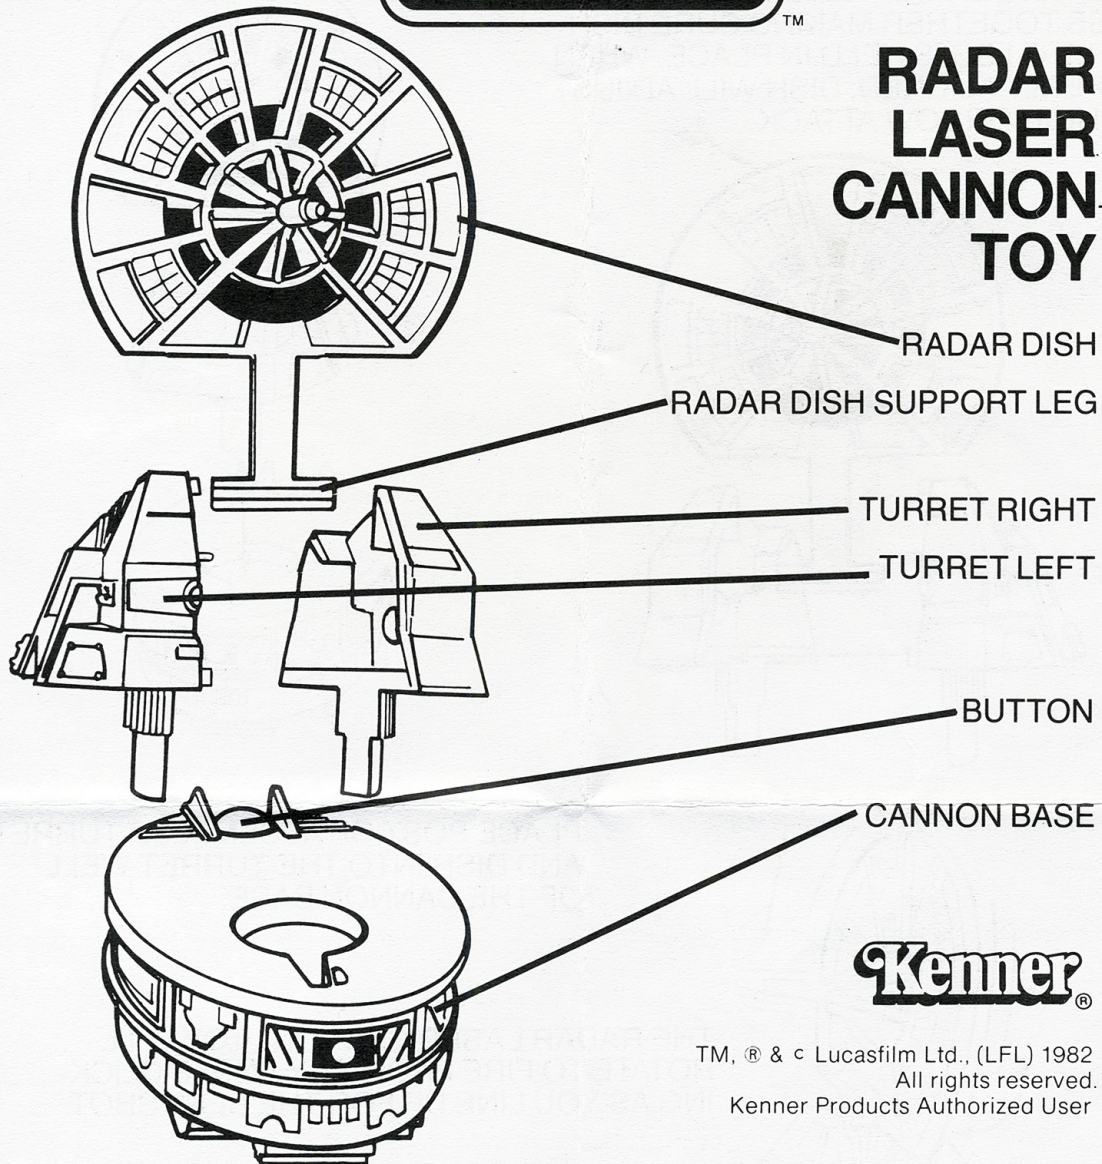

**Kenner**®

TM, ® & © Lucasfilm Ltd., (LFL) 1982  
All rights reserved.  
Kenner Products Authorized User



**WE REALLY DO CARE!**

We make each toy with tender loving care. If there is a problem with your toy please let us know. Simply describe the problem and mail that description along with


your name and address to:  
KENNER PRODUCTS  
Consumer Relations Dept.  
1014 Vine St.  
Cincinnati, OH 45202

PLACE ONE SIDE OF DISH SUPPORT LEG INTO HOLE IN TURRET LEFT.

ALIGN TURRET LEFT AND RIGHT SIDES AND PRESS TOGETHER MAKING SURE DISH SUPPORT LEG IS HELD IN PLACE. WHEN PROPERLY ALIGNED, DISH WILL ADJUST FOR HIGH OR LOW ATTACK.

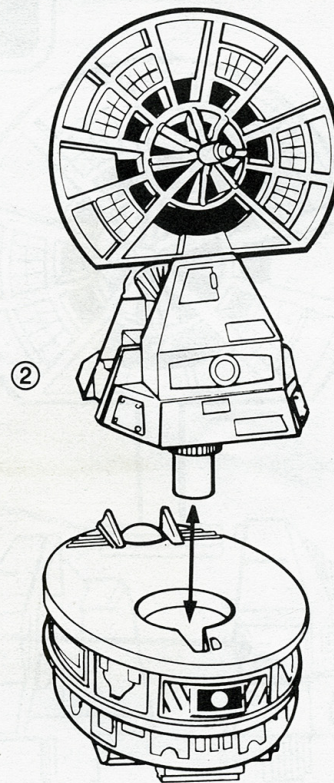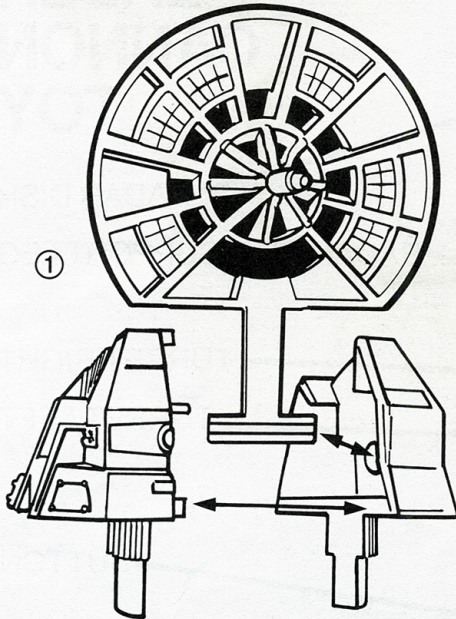

PLACE POST OF ASSEMBLED TURRET AND DISH INTO THE TURRET WELL OF THE CANNON BASE.

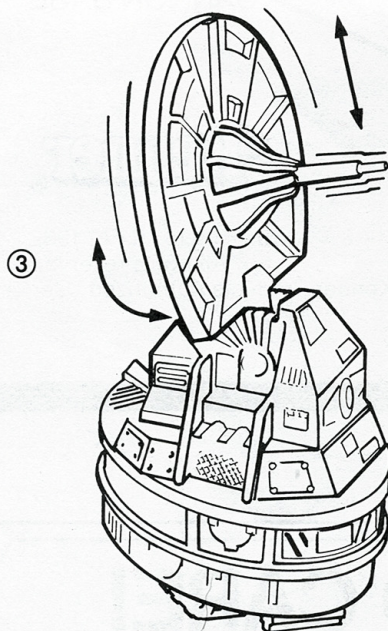

THE RADAR LASER CANNON™ TOY WILL ROTATE TO FIRE FROM ANY ANGLE CLICKING AS YOU LINE UP FOR THE BEST SHOT.

YOU CAN PRETEND THAT YOUR RADAR LASER CANNON™ TOY HAS BEEN HIT BY PRESSING THE BLACK "DESTRUCT" BUTTON ON THE TOP OF THE CANNON BASE.

