




# STAR WARS

©1977 TWENTIETH CENTURY-FOX FILM CORPORATION

## ACTION DISPLAY STAND

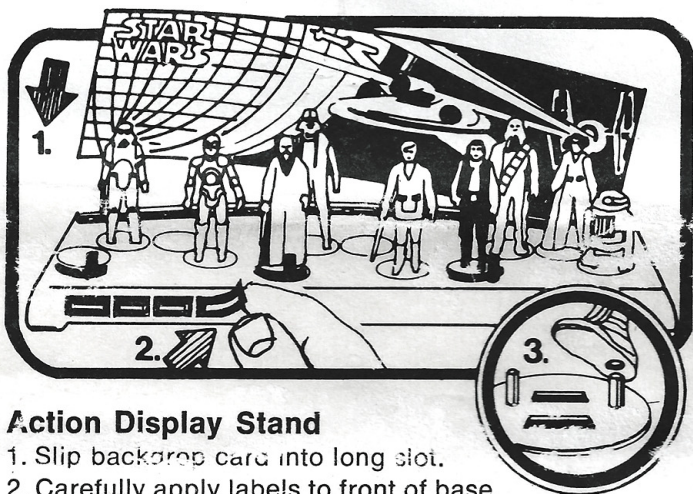

### Action Display Stand


1. Slip backcard into long slot.
2. Carefully apply labels to front of base, one at a time as shown.
3. Place figures on stand.

You can place either leg on one of the two pegs on the turntable as shown above. However, make sure you stand figures on one peg only.

### HELPFUL HINT:

If, for any reason, any of the turntables should pop off, it is easy to reassemble.

Simply put the turntable back into place. Then pop the plastic gear back on under the toy.

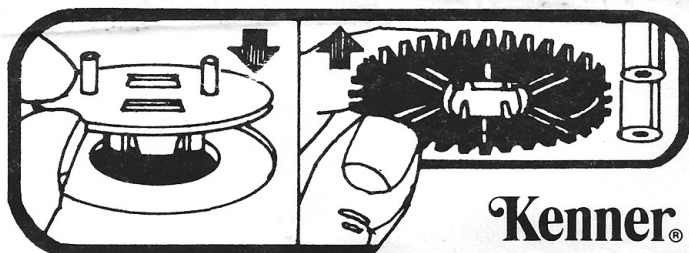

772-00400

### Kenner®

Meets or exceeds all safety requirements of Product Standard 72-76

™ TRADEMARK OF TWENTIETH CENTURY-FOX FILM CORPORATION Characters and Vehicles: ©1977 TWENTIETH CENTURY-FOX FILM CORPORATION  
 ©CP PRODUCTS CORP. 1979 by its Div. KENNER PRODUCTS, Cincinnati, Ohio 45202



STAR WARS VISUAL GUIDES  
[WWW.JEDITEMPLEARCHIVES.COM](http://WWW.JEDITEMPLEARCHIVES.COM)

From the Collection of  
*George Telesco*