





STAR WARS

©1977 TWENTIETH CENTURY-FOX FILM CORPORATION

DARTH VADER TIE FIGHTER™

Apply Labels using the package as a guide.


Align labels carefully before pressing down.

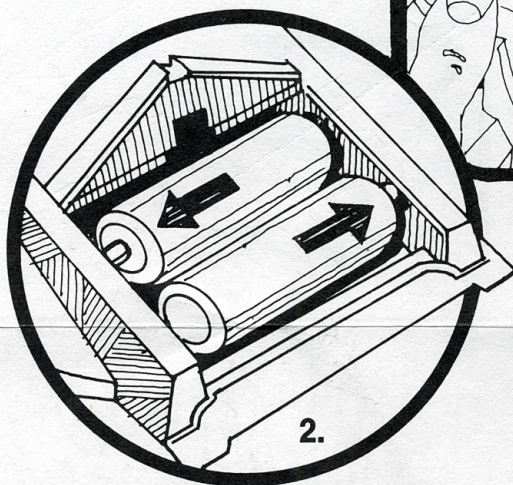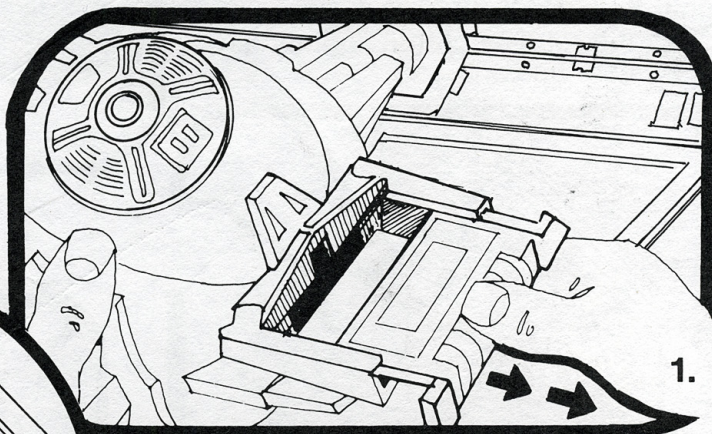

BATTERIES

(2 "AA" Penlite batteries not included)
Alkaline batteries recommended for extended battery life.

1. Turn Tie Fighter upside down. Slide battery cover out.
2. Put batteries in **exactly** as you see here. Replace cover.
3. Push button on top of battery compartment for Laser Light and Laser Sound.

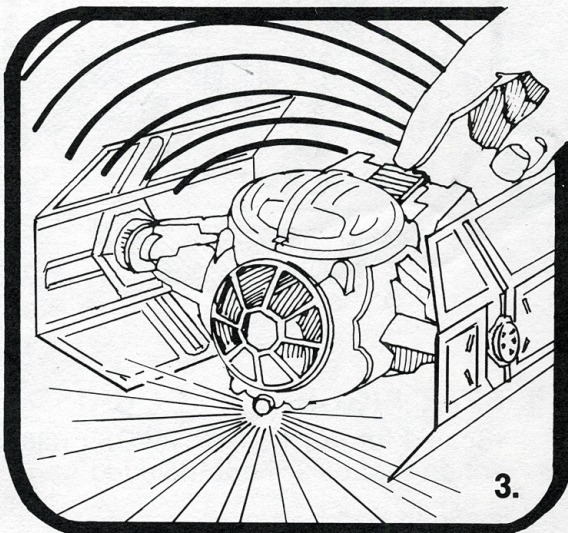

**IF YOU HAVE LASER SOUND,
BUT NO LIGHT, YOUR
BATTERIES ARE IN BACKWARDS.**

Kenner

Meets or exceeds all safety requirements of Product Standard 72-76

™ TRADEMARK OF TWENTIETH CENTURY-FOX FILM CORPORATION CHARACTERS AND VEHICLES: ©1977 TWENTIETH CENTURY-FOX FILM CORP.

©CPG PRODUCTS CORP. 1979 by its Div. KENNER PRODUCTS, Cincinnati, Ohio 45202




1. RELEASE THE WINGS

To make the wings “fly” off, push the release buttons on each side of the hatch.

2. PUT ON THE WINGS


Push the wing on **exactly** as shown until it “snaps”. (You may have to push the release button slightly as you push the wing on.)

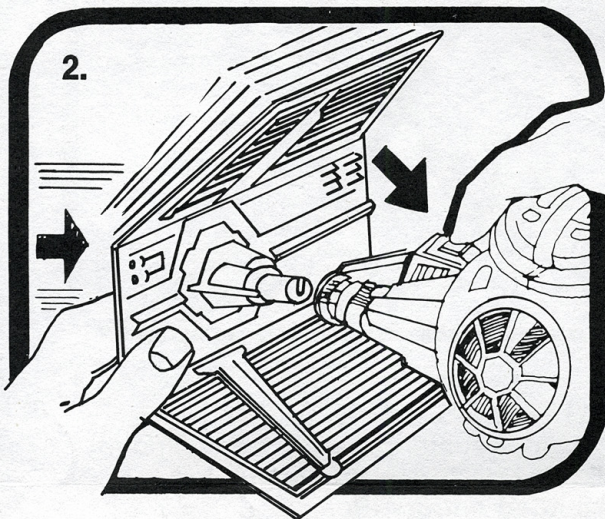


3. IMPORTANT! ASSEMBLE WINGS

The wings have been carefully designed for Long Play. If, during play, they come apart, they are **NOT BROKEN**.


- a. Simply put the tabs into one side of wing as shown.
- b. Push remaining tabs **IN** towards center of wing, turn wing over, and push piece into place.

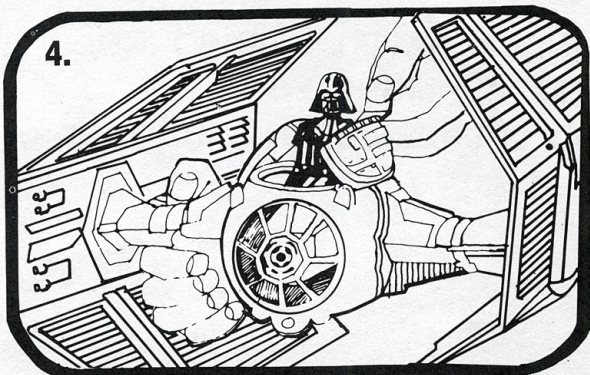


425-00600

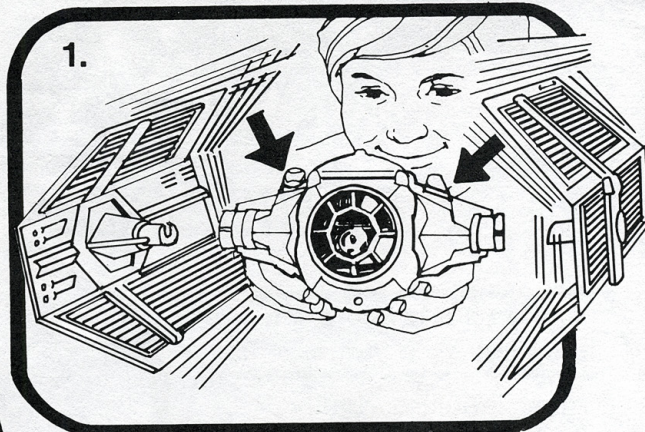

1.

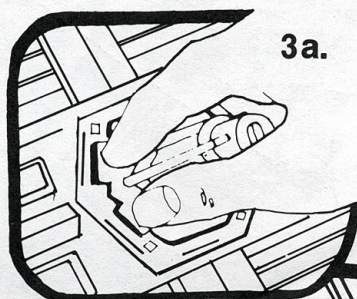

3a.

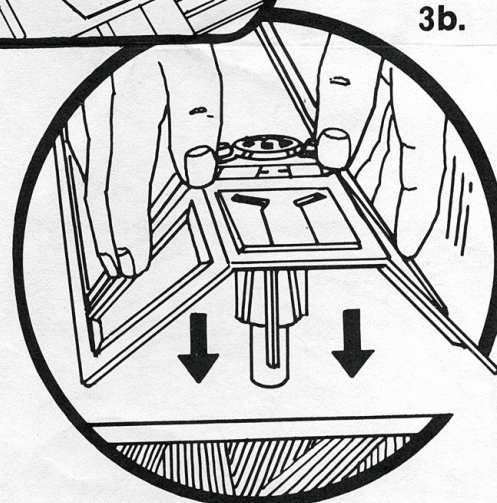

3b.

4. SEAT FIGURES IN COCKPIT

(Scaled for most STAR WARS™ mini-action figures . . . not included.)

- a. Open Hatch
- b. Raise seat and insert character.
- c. Lower seat, close hatch.

PATENT PENDING

39100

